
ELECTRICAL DIAGRAM BRUTALE 910 S – R (MY 2007) BRUTALE 989 R - 1078 RR (MY 2008).

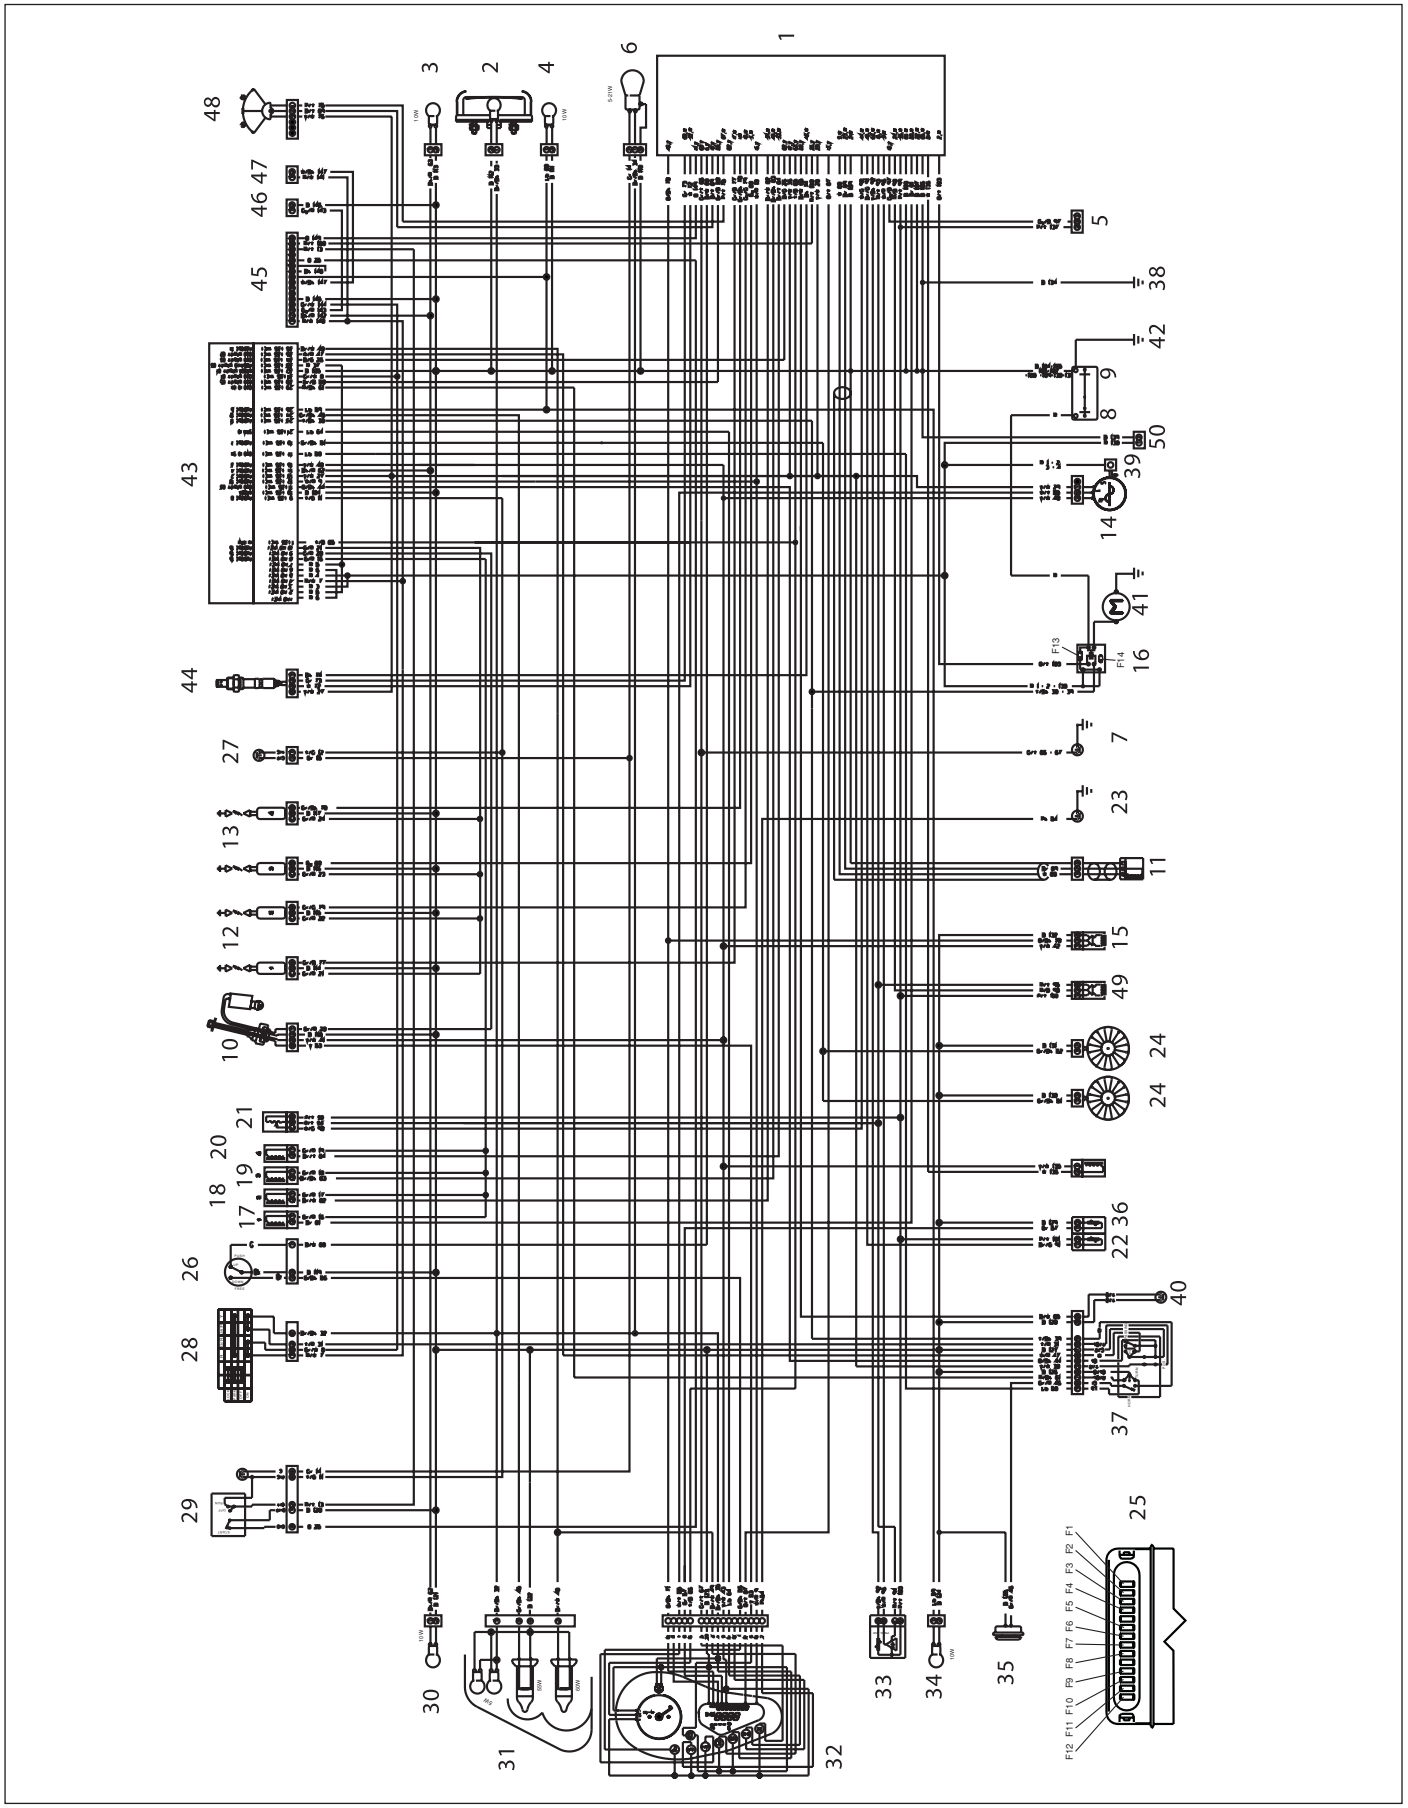

PARTS LIST

Parts list	
Rif.	*Description*
1	CPU
2	Number plate light
3	Right indicator
4	Left indicator
5	Diagnostic connector
6	Rear stop light
7	Neutral switch
8-9	Battery
10	Fuel probe – pump
11	R.p.m. sensor
12	Coil
13	Coil
14	Alternator
15	Speed sensor
16	Solenoidd
17-18 19-20	Injectors

Parts list	
Rif.	*Description*
21	Butterfly potentiometer
22	Water temperature sensor – CPU
23	Oil switch
24	Electric fan
25	Fuses
26	Side stand switch
27	Rear stop switch
28	Ignition switch
29	Safety and Front stop switch
30	Right indicator
31	Front headlight
32	Instrument panel
33	Air temperature/pressure sensor
34	Left indicator
35	Horn
36	Water temperature sensor for instrument thermometer

Parts list	
Rif.	*Description*
37	Light switch
38	Frame/CPU earth
39	Battery recharge
40	Clutch switch
41	Starter motor
42	Frame earth
43	Service control unit
44	Lambda probe
45	Anti-theft connector
46	LED indicator
47	Saddle switch
48	Drop switch
49	Cam rev sensor
50	Battery recharge kit connector

Wiring colour code	
Letter(s)	*Colour*
R	Red
Y	Yellow
B	Blue
G	Green
W	White
Bk	Black
P	Pink
V	Violet
Sb	Sky blue
Gr	Grey
O	Orange
Br	Brown

In combined colors, background and marking colors have been pointed out. E.g. : Br/Bk.

Fuses list		
Ref.	*Amps (A)*	*Use*
F1	5	Side lights
F2	5	Speed sensor
F3	5	Right direction indicator
F4	5	Left direction indicator
F5	15	Electric cooling fan
F6	5	Rear headlight/stop light
F7	15	Latch relay
F8	7,5	Start switch
F9	15	Dipped beam headlight
F10	5	Instrument panel clock
F11	15	Main beam headlight
F12	15	Injectors-Fuel pump-Coils
F13	40	Battery recharge
F14	40	Spare for battery recharge